AUDIOVOX

AM/FM Clock Radio with CD Player

Model No.: CD1120

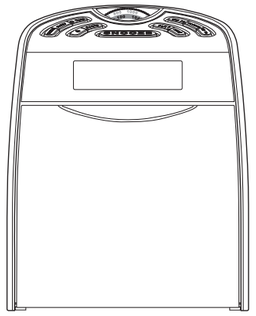

User Manual

SAFETY PRECAUTIONS

This product contains a low power laser device.

CLASS 1 LASER PRODUCT
APPAREIL À LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1
PRODUTO LASER CLASSE 1

DO NOT TOUCH THE LENS
CAUTION: INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.

WARNING:

- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THE UNIT TO RAIN OR MOISTURE.
- TO AVOID ELECTRICAL SHOCK, DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.
- THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUID, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Warnings:

- The apparatus and AC adapter shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus and AC adapter.
- To reduce the risk of fire or electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.
- The AC adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from mains completely, the AC adapter should be disconnected from the mains socket outlet completely.
- To prevent fire or shock hazard, do not expose this appliance to rain or moisture.
- Avoid exposure to extreme temperatures, direct sunlight, moisture, sand, dust or mechanical shock.
  Allow adequate air circulation to prevent internal heat build-up. Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation holes.
- Should any objects or liquids fall into the unit, unplug the unit and have it checked by qualified personnel before operating it any further.
- When cleaning the casing, use a soft cloth dampened with a mild detergent solution. Never use abrasive cleansers or chemical solvents.

SAFETY PRECAUTIONS

On Operation

Do not turn up the volume while listening to your iPod with no audio signals or very low level inputs. If you do so, the speakers may be damaged when the peak level of the sound is played.

On Use

Never use the unit where it would be subject to:

- Heat sources such as radiators or air ducts.
- Direct sunlight.
- Excessive dust.
- Moisture or rain.
- Mechanical vibration or shock.
- Uneven surface.
  - Do not place any heavy objects on top of the unit.
  - When the unit is used with an AC power adapter, do not wrap the unit in a cloth, blanket, etc.. If you do so, the temperature inside and outside the unit may rise considerably, resulting in malfunctioning of the unit.
  - If the unit is brought directly from a cold to a warm location, or is placed in a very damp room, the moisture may condense on the lens inside the unit. Should this occur, the unit will not operate. In this case, remove the disc and leave the unit in a warm place for several hours until the moisture evaporates.
  - For the unit to operate at its best, it should not be subject to temperatures below 41°F (5°C) or above 95°F (35°C).

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightening storms or when unused for a long period of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Portable Cart Warning

LOCATION OF CONTROLS

Unit

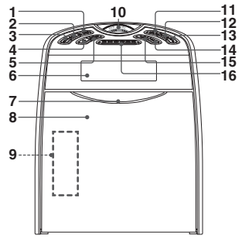

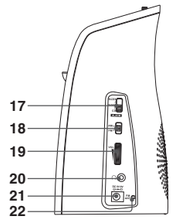

1 ■ (Stop)/**TIME** Button
2 **SLEEP** Button
3 ↻ (Repeat)/**RANDOM** Button
4 ⏻ (Standby/On) Button
5 **RADIO** Button
6 LCD Display
7 OPEN Handle
8 CD Door
9 Battery Compartment (Within the CD Door)
10 **TUNING** Knob
11 ⏮ (Previous)/**HOUR** Button
12 ⏭ (Next)/**MIN** Button
13 ⏯ (Play/Pause) /**CD** Button
14 **ALM 2** (Alarm 2) Button
15 **ALM 1** (Alarm 1) Button
16 **SNOOZE** Button
17 Alarm Function Selector (BUZZER/RADIO/CD)
18 **BAND (AM/FM)** Selector
19 **VOL** (Volume) Control
20 🎧 (Headphone Jack)
21 **DC IN 9V** Jack
22 **FM ANT.** (FM Antenna)

Display Indicator

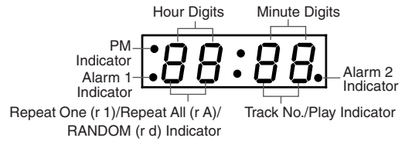

POWER SUPPLY

USING THE AC ADAPTER

Using an AC adapter other than the one supplied with the unit may damage the unit. This AC adapter operates on AC 120V~60Hz.

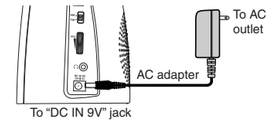

CAUTIONS:

- Before use, make sure the rated voltage of the adapter matches your local voltage.
- The included AC adapter is for use with this unit only. Do not use it with other equipment.
- If you are not going to use the unit for a long time, disconnect the AC adapter from the wall outlet.
- Whenever the AC adapter is plugged in to a wall outlet, electricity is running through the unit, even when the power switch is turned off.

POWER BACK-UP DURING POWER INTERRUPTION

Be sure to install a 9V battery (not included with this product) for the power back-up function.
Open the CD door and insert one "9V" battery into the battery compartment. If the AC power supply is interrupted, the battery supplies power to keep the clock operating and the alarm times set.

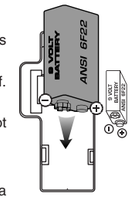

- During power interruption, the clock function is maintained although the product's display will be off. The alarm sound will not come on.
- This battery is only for clock operation and alarm memory during power interruption. You cannot listen to the radio with the battery.

WHEN TO REPLACE THE BATTERY

To check the battery condition, unplug the AC adapter from the wall outlet and plug it in again after a few minutes. If the displayed time is incorrect, replace the battery
with a new one.

Cautions:

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Be sure to install the battery before unplugging the AC adapter.
- When the unit is left unplugged for a long time, remove the battery to avoid undue battery discharge and unit damage from battery leakage.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

VOLUME ADJUSTMENT

TO ADJUST THE VOLUME

Adjust the **VOL** control to obtain the desired volume.

FOR PERSONAL LISTENING

Connect headphones (Ø3.5mm stereo mini plug) to the PHONES jack. Adjust the **VOL** control to obtain the desired volume.

When headphones are connected, the speakers are automatically disconnected.

Warning: Excessive sound pressure from earphone and headphones can cause hearing loss.

CLOCK SETTING

Setting the clock can only be done in STANDBY mode.

- If the unit is plugged in with the supplied AC adapter and the unit is in standby mode, the clock digits will blink.

1. Press the **TIME** button, the hour and minute digits blink.
2. Press the **HOUR** button to adjust the hour digits.
3. Press the **MIN** button to adjust the desired minutes then press the **TIME** button once to confirm.

- 12:00 PM = NOON time. The PM indicator will light up.

LISTENING TO THE RADIO

1. Press the ⏻ button to turn on the unit and the display will show "ON".
2. Press the **RADIO** button to radio mode.
3. Select a band (AM/FM).

4. Tune in to a station.



Note: After listening to the radio, press the ⏻ button to turn the radio off and the display will show "OFF".

TO IMPROVE THE RADIO RECEPTION

FM: Fully unwind the antenna wire. Extend the antenna wire and place it in the position that sounds best.
AM: Rotate the unit horizontally until orientation with best reception is found.
Note: Do not connect the FM antenna wire to an outside antenna.

CD1120 for AUDIOVOX English IB.indd 1
2009-08-07 10:57:48

CD PLAYBACK

1. Hold the OPEN handle to open the CD door. Place a disc in the center with the label side front and then close the CD door gently.
2. Press the ⏻ button to turn the unit on and the display will show "ON". Then press the **CD** button to CD mode.
3. After a short time, the "- -" icon is shown on the display. Then the total track no. is shown on the display.
4. Press the ▶II button to start playing.

TO PAUSE PLAYBACK

- Press the ▶II button.
- To resume playback, press the ▶II button again.

TO STOP PLAYBACK

- Press the ■ button.

SKIPPING TO A DIFFERENT TRACK

- Press either the ⏮ or ⏭ button according to the desired direction.
  Press the ⏮ button to skip to the start of the current track or previous tracks. Press the ⏭ button to skip to the next track.

LOCATING A PARTICULAR POINT ON A TRACK

- Press and hold the ⏮ or ⏭ button during playback, according to the desired direction, and release at the desired point.

PLAYBACK MODE

REPEAT CURRENT TRACK

- Press the ↻/**RANDOM** button until the display shows "r1".
  The current track will be played repeatedly.



REPEAT THE ENTIRE CD

- Press the ↻/**RANDOM** button until the display shows "rA".
  All tracks will be played repeatedly.



RANDOM PLAYBACK

- Press the ↻/**RANDOM** button until the display shows "rd". All tracks will be played in random order. After all tracks are played, the unit will stop automatically.



CANCEL PLAYBACK MODE

- Press the ↻/**RANDOM** button until the "r1", "rA" and "rd" disappear.

DUAL ALARM SETTING

- The unit should be in STANDBY mode to set alarm.
- The alarm can be set to activate twice a day by setting two different alarm times in ALARM1 and ALARM2.
- The unit can be set to BUZZER, RADIO or CD when the alarm timer reaches the preset time.

TO SET ALARM 1

1. Press the **ALM 1** button until the hour & minute digits blink on the display.
2. Press the **HOUR** button to adjust the hours.
3. Press the **MIN** button to adjust the minutes.
4. Press the **ALM 1** button again to confirm.

5. **For radio alarm**
   First tune into a desired station and adjust the volume. Set to the RADIO position.

For buzzer alarm
Set to the BUZZER position.

For CD alarm
Set to the CD position.

6. The alarm 1 indicator will light up.
   The clock radio will wake up to "CD", "Radio" or "Buzzer" when alarm timer reaches the preset time and then turns off automatically after 60 minutes.

Notes:

- For the "Radio" Alarm, you should tune into your desired stations in FM or AM band before setting alarms, and it will turn on to the last station you tuned in.
- For "CD" Alarm, insert one CD into the unit. If no CD is inserted in the tray, it will alarm to the buzzer directly.

TO SET ALARM 2

Setting the alarm for alarm 2 is the same as setting alarm 1.
Note: If the Alarm 1 & Alarm 2 are set to the same time, the unit will alarm once only.

TO CHANGE THE ALARM TIME

Just follow the instructions above to set the alarm time again.

TO TURN OFF ALARM

1. Snooze (If you want to snooze a few more minutes)
   Pressing the **SNOOZE** button will deactivate the sound for 6 minutes. You can repeat this function as many times as you like within 60 minutes from the preset alarm time.
2. To stop alarm sound
   Press the ⏻ button to stop alarm sound (alarm setting will stay active, it will turn on again, 24 hours later- the time that the alarm is set to).

TO CANCEL ALARM MODE

After setting alarms, tap the **ALM 1** & **ALM 2** buttons until the alarm 1 & alarm 2 indicators disappear.
Note: You can turn alarm1 or alarm 2 back on again by tapping **ALM 1** or **ALM 2**.

SLEEP TIMER SETTING

The sleep timer turns the unit off automatically at a pre-selected time.

1. While the unit is on, press the **SLEEP** button and the display shows "90".
2. Press the **SLEEP** button repeatedly to select the desired sleep time as listed below:



3. The unit will automatically turn off once it reaches the sleep time.

MAINTENANCE

CLEANING THE UNIT

Do not use volatile chemicals on this unit. Clean by lightly wiping with a soft cloth.

CLEANING THE CD

If the CD skips or will not play, the disc may need to be cleaned.
Before playing, wipe the disc from the center outwards with a cleaning cloth. After playing, store the disc in its case.

HANDLING THE DISC

Only touch the CD on the edge to avoid finger prints on its surface.
Do not stick paper or tape nor write anything on the surface.

TROUBLESHOOTING GUIDE

Problems	*Solutions*
CD	
System does not turn on	• Make sure the unit is plugged in with the AC adapter.
Disc in place but unit won't play	• Make sure the CD button is pressed. • Make sure disc label is facing front. • Make sure disc is clean. • Pause mode is activated. • Disc may be damaged or dirty; check disc.
Disc skips	• Make sure the unit is on a secure spot. Vibration or jarring can cause the disc to skip.
RADIO	
Poor FM reception	• Make sure the FM antenna wire is fully extended. • Electrical interference in your home can cause poor reception. Move the unit away from them (especially those with motors and transformers).
Poor AM reception	• Rotate the unit horizontally until orientation with best reception is found.
CLOCK	
Clock does not show the correct time.	• There has been an electrical power interruption.
Alarm does not come on at the preset time.	• Is the current time correctly set on the time display? • Is the alarm time correctly set?

SPECIFICATION

Power requirements	DC IN 9V For the power backup function: 9V battery

LIMITED WARRANTY

VENTURER ELECTRONICS ("VENTURER") makes the following limited warranty. This limited warranty extend to the original consumer purchaser and is limited to non-commercial use of the product.

Ninety (90) Day Parts & Labor Warranty

VENTURER products purchased in the United States are warranted to be free from defects in materials or workmanship for a period of ninety (90) days from the date of their original retail purchase. If the unit fails to conform to this warranty, we will service the product using new or refurbished parts and products, at **VENTURER**'s sole discretion.
During a period of ninety (90) days from the effective warranty date, VENTURER will provide, when needed, service labor to repair a manufacturing defect at its designated Service Center. To obtain warranty service in the Untied States, you must first call our **Customer Support Center at 1800-252-6123, during the hours listed in the box below.** The determination of service will be made by **VENTURER** Customer Support. **PLEASE DO NOT RETURN YOUR UNIT TO VENTURER WITHOUT PRIOR AUTHORIZATION.** New or remanufactured replacements for defective parts or products will be used for repairs by VENTURER at its designated Service Center for ninety (90) days from the effective warranty date. Such replacement parts or products are warranted for an additional ninety (90) days from the date of repair or replacement. The Customer will be required to ship the unit to the Service Center indicated at the time Customer Support is contacted to make the necessary repairs. The customer is responsible for all transportation charges to the service facility.

Packaging and Shipping Instruction

When you send the product to the VENTURER service facility you must use the original carton box and packing material or an equivalent as designated by **VENTURER**.

Your Responsibility

(1) You must retain the original sale receipt to provide proof of purchase.
(2) These warranties are effective only if the product is purchased and operated in the U.S.A. or Canada.
(3) Warranties extend only to defects in material or workmanship, and do not extend to any product or parts which have been lost or discarded, or damage to product or parts caused by misuse, accident, improper operation or maintenance, or use in violation of instructions provided with the product, or to product which has been altered or modified without authorization of **VENTURER**, or to products or parts thereof which have had the serial number removed or changed.

Out of Warranty

In the event your product requires repair after the limited warranty period has expired, please contact our Customer Support Center at **1800-252-6123 or www.1800customersupport.com/audiovox**
Hours: Monday-Thursday: 9-7, Friday: 9-5, Saturday: 9-12 EST
Important: You are responsible for any transportation, shipping or insurance relative to the return of the product to our Product Returns Center.

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall **VENTURER** be liable for consequential or incidental damages.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within action must be commenced to enforce any obligation of **VENTURER** arising under the warranty or under any statute, or law of the United States or any state thereof, is hereby limited to ninety (90) days from the date of purchase. This limitation does not apply to implied warranties arising under state law.
This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.

For more information on other products and services, please visit our web site at:
www.1800customersupport.com/audiovox

Important: Also keep your "Bill of Sale" as proof of purchase.

Model no. ..... Product name .....
Type of set .....
Serial no. ..... Invoice no. .....
Date purchased..... Dealer name .....

FOR SERVICE AND REPAIR, PLEASE VISIT **www.1800customersupport.com/audiovox**

Design and specifications are subject to change without notice.

Printed in China 811-112091W011

CD1120 for AUDIOVOX English IB.indd 2 2009-08-07 10:57:49